



Electronics Box Instructions and Owners Manual

Fishmaster, Inc.
www.Fishmaster.com
Support@Fishmaster.com

Phone: 877-777-8963
Fax: 877-437-6210

THANK YOU FOR YOUR BUSINESS. IF YOU ARE NOT COMPLETELY SATISFIED IN ANY WAY WITH YOUR NEW ELECTRONICS BOX, PLEASE CONTACT US. Our entire purpose as a company is to offer great products at affordable prices that our customers love.

Please take a few minutes to read the installation instructions and become familiar with the electronics box and installation before beginning to ensure a high quality, trouble free installation and use. If you have any questions during your installation give us a call at 877-777-Tower or e-mail Support@Fishmaster.com



IMPORTANT NOTES ON INSTALLING AND USING YOUR NEW ELECTRONICS BOX

- Read entire manual before installation
- Clean fiberglass with fiberglass cleaners and waxes
- Clean Lexan door with mild soap and water
- Handle carefully during installation to avoid damage
- Always set down on the top side since this will not be seen after installation
- Use Loctite or thread lubricant to prevent galling of hardware

Fishmaster, Inc Warranty

Fishmaster warrants this product against manufactures defects for a period of five (5) years. Anodized and metal surfaces are specifically excluded, as their care and use cannot be controlled by the manufacturer. Any modifications or improper use, not approved in writing by Fishmaster shall void this warranty. Fishmaster is not responsible for personal injury or damage to the boat caused by the use of this product. Fishmaster's obligation under this warranty shall not include any transportation charges or costs of installation or any liability for direct, indirect or consequential damages resulting from delay or improper installation. Fishmaster is not responsible for damage or deterioration of cosmetic surface finishes, including discoloration, chalking, cracking, crazing, fading or oxidation of gel coat, stress lines, plated or painted metal and stainless steel finishes, plastics or acrylic materials, or anti-fouling bottom paint. If you need to make a warranty claim contact Fishmaster at 877-777-Tower to receive a return authorization number which is required for all claims. Defects must be reported within 30 days of discovery.

Fishmaster Swivel Electronics Box Parts List

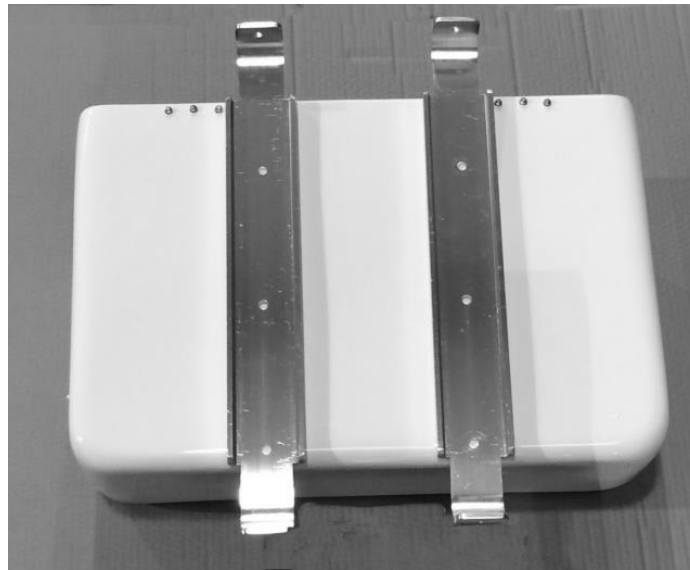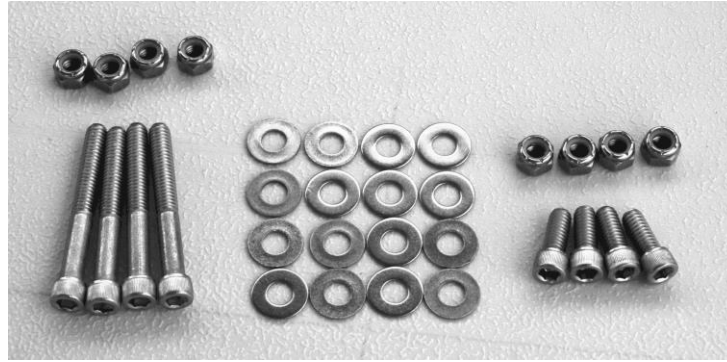

Item	Description
Electronics Box	Fishmaster Electronics Box
Mounting Brackets (2)	Mounts Electronics Box to T-Top
8mm X 65 SHCS (4)	To Bolt the Mounting Bracket to the T-Top
8mm X 25 SHCS (4)	To Bolt the Electronics Box to the Mounting Bracket
8mm Washer (16)	Used on both ends of all bolts
8mm Nylock Nut (8)	Nuts to be used with above bolts
Keys (2)	For closing and locking the Electronics Box
Customer Supplied Items	
6mm Hex Key	To Tighten Bolts
13mm Socket or Wrench	To Tighten Bolts
8mm or 5/16" Drill Bit	To Drill Holes in T-Top and Electronics Box for Bolts
Thread locker / Loctite	Non-permanent thread locker for all bolts

INSTALLATION

1. Note the holes in the mounting bracket are not symmetrical. This is to allow maximum flexibility in how far forward or rearward you can mount the box. Make sure both brackets are installed the same way on the electronics box.
2. Determine where you want to mount the electronics box. The brackets are designed to mount to the horizontal tubes that mount to the uprights of the Fishmaster T-Top. With other T-Tops you will need to provide your own brackets.



3. Place the brackets on the electronics box where they will be installed and mark 4 holes on the electronics box. Make sure the brackets are aligned with the sides of the electronic box as shown in the picture on Page 2. Next drill the holes **RUNNING THE DRILL IN REVERSE**. This will prevent the drill bit from chipping the gelcoat of the fiberglass box. Use an 8mm or 5/16" drill bit.
4. Bolt the brackets to the box using the M8x25 bolt and M8 Locknut using Loctite. Be sure to use thread locker on the threads and a washer on both sides of the fiberglass. Do not over tighten as this can crack the gelcoat.
5. This step will require another person. Put the brackets centered on the T-Top as shown above. It will require a good bit of force to push the brackets into place. It may stay in position but have a second person hold it in position.
Note: this can be done with the fabric on but is easier with the front half of the fabric removed
6. Drill M8 or 5/16" holes through the hole in the bracket and through both sides of the T-Top. **BE SURE TO KEEP THE DRILL AND DRILL BIT LEVEL.**
7. Bolt the brackets to the T-Top using the M8x65 socket head cap screws and M8 locknuts, using a washer under the bolt head and nut. Remember to use Loctite.

NOTE: Every Fishmaster Electronics Box has a unique key. If you lose your backup we recommend having a new backup made at your local hardware store. We can provide new lock assemblies if needed.