



Universal Antenna Mounting Bracket Instructions and Owners Manual

Fishmaster, Inc.
www.Fishmaster.com
Support@Fishmaster.com

Phone: 877-777-8693
Fax: 877-437-6210

THANK YOU FOR YOUR BUSINESS. IF YOU ARE NOT COMPLETELY SATISFIED IN ANY WAY WITH YOUR UNIVERSAL ANTENNA MOUNTING BRACKET, PLEASE CONTACT US. Our entire purpose as a company is to offer great products at affordable prices that our customers love.

Please take a few minutes to read the installation instructions and become familiar with the UNIVERSAL ANTENNA MOUNTING BRACKET installation before beginning to ensure a high quality, trouble free installation and use. If you have any questions during your installation give us a call at 877-777-8693 or e-mail Support@Fishmaster.com

IMPORTANT NOTES ON INSTALLING AND USING YOUR UNIVERSAL ANTENNA MOUNTING BRACKET

- Read entire manual before installation
- Grease all bolts
- Check bolts after first few uses and retighten when needed

Fishmaster, Inc Warranty

Fishmaster warrants this product against manufactures defects for a period of five (5) years. Anodized surfaces are specifically excluded, as their care and use cannot be controlled by the manufacturer. Any modifications or improper use, not approved in writing by Fishmaster shall void this warranty. Fishmaster is not responsible for personal injury or damage to the boat caused by the use of this product. Fishmaster's obligation under this warranty shall not include any transportation charges or costs of installation or any liability for direct, indirect or consequential damages resulting from delay or improper installation. If you need to make a warranty claim contact Fishmaster at 877-777-Tower to receive a return authorization number which is required for all claims. Defects must be reported within 30 days of discovery.

Fishmaster Universal Antenna Mounting Bracket Parts List



Item	Description
Universal Antenna Mounting Bracket	Used to mount accessories to the T-Top
2 Lock Nut	Used to mount Universal Mounting Bracket to T-Top
2 Washers	Used to mount Universal Mounting Bracket to T-Top
2 Socket Head Cap Screws	Used to mount Universal Mounting Bracket to T-Top



The Universal Antenna Mounting Bracket mounts into the pre drilled holes in the front center or the rear center of the Fishmaster T-Top where the sections connect. To mount the bracket anywhere else on the T-Top you must drill your own holes into the T-Top tubing.

INSTALLATION

1. Remove the 2 bolts that connect the two center sections together.



2. Line up holes of T-Top frame with holes on the Universal Antenna Mounting Bracket. Insert the Socket Head Cap Screw supplied with the bracket. Attach supplied washers and lock nuts on Socket Head Cap Screw and tighten.



3. Attach your chosen accessory.

